 


PRODUCT INFORMATION

 
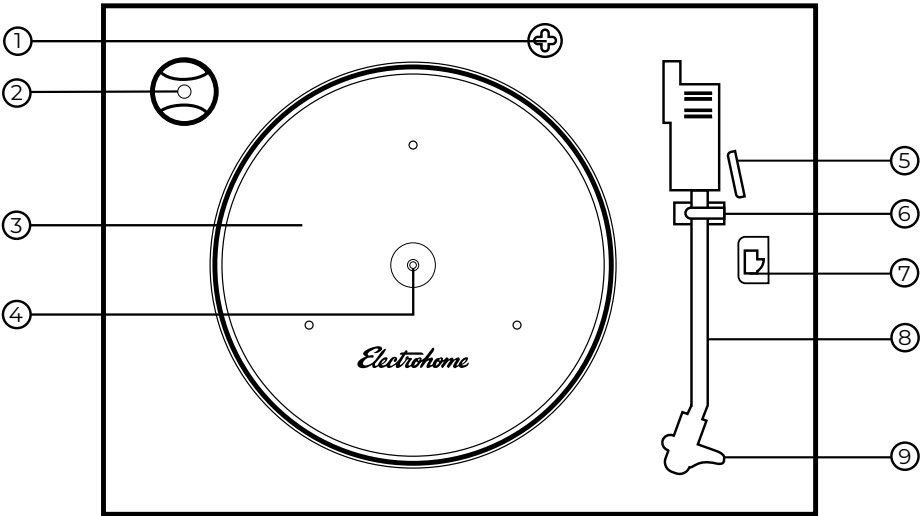 


- 1. Transit Screw
- 2. 45 Adapter
- 3. Platter
- 4. Spindle
- 5. Cueing Lever
- 6. Tonearm Lock
- 7. Speed Selector (33/45/78 RPM)
- 8. Tonearm
- 9. Stylus

IMPORTANT
Before playing, please remove packaging foam on top of the Turntable. Then use a screwdriver to turn the Transit Screw in a clockwise direction until the screw is fully down to unlock the Turntable

POWER ON FOR FIRST TIME

- 1. Plug in the unit and set the rear Power Switch to ON
- 2. Press the Standby Knob to turn on the unit

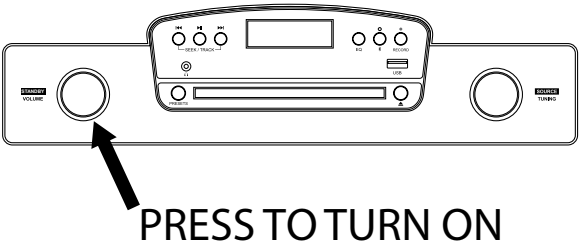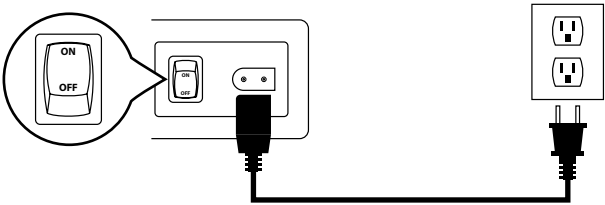 


PLAYING A RECORD

- 1. Plug in the unit and set to Phono function
- 2. Ensure the Transit Screw is fully down for playback
- 3. Place a record on the Platter. If playing a 7" record place the 45 Adapter on the Spindle in the center of the Platter
- 4. Ensure the Speed Selector is set to the proper speed (33, 45, or 78)
- 5. Remove the plastic stylus protector from the end of the Tonearm
- 6. Unlock the Tonearm Lock and Raise the Tonearm using the Cueing Lever
- 7. Position the Needle over the edge of the record
- 8. Lower the Tonearm using the Cueing Lever
- 9. The Turntable will stop spinning at end of album

NOTE: Always lock Tonearm when record player is not in use

Questions? Give us a chance to help, we're just a click away.

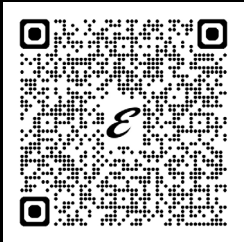

Scan for easy set up instructions, videos, and frequency asked questions.



[Electrohome.com/support](https://electrohome.com/support)



[Electrohome.com/contact](https://electrohome.com/contact)